


black red white gray

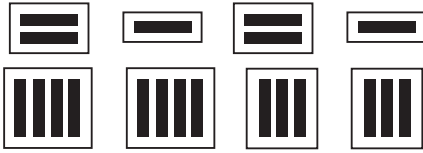

U S A



U	SA-207		U
N	SA-207		N
I	SA-207		I
T	SA-207		T
E			E
D			D

SA-207

KDS  
1998

S	U	S
T	U	T
A	S	A
T	S	T
E	A	E
S	A	S

SA-207







SA-207




0.045" wide strips









0.05" wide strips

0.05" wide strips



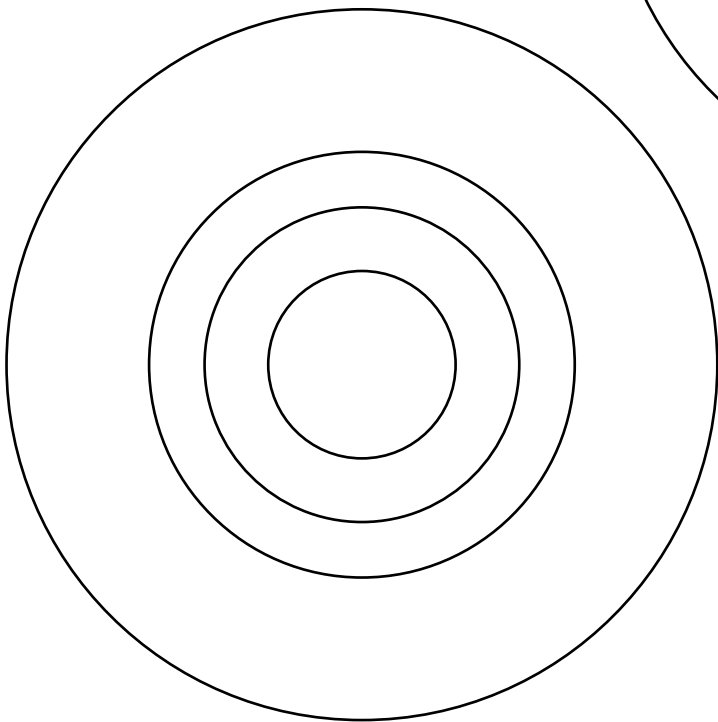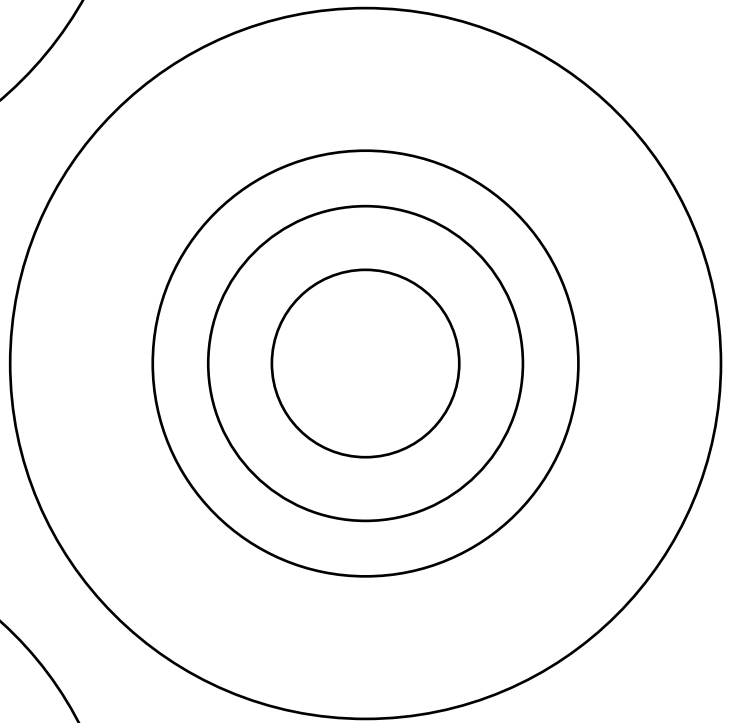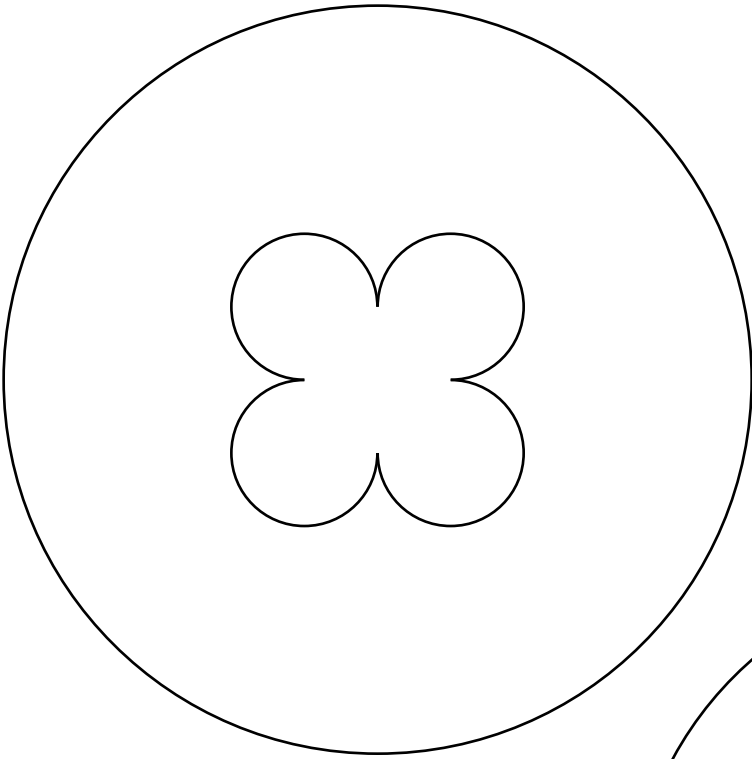

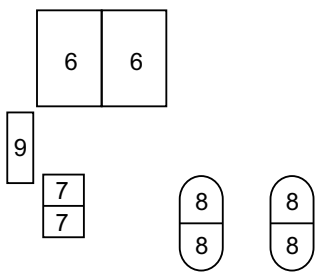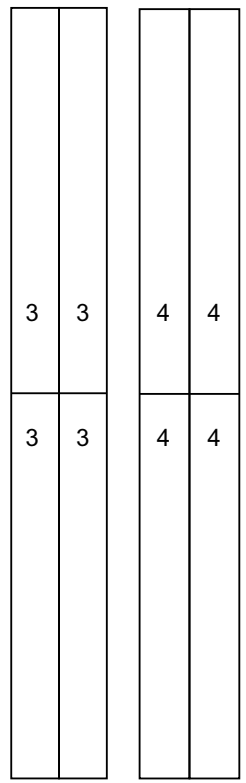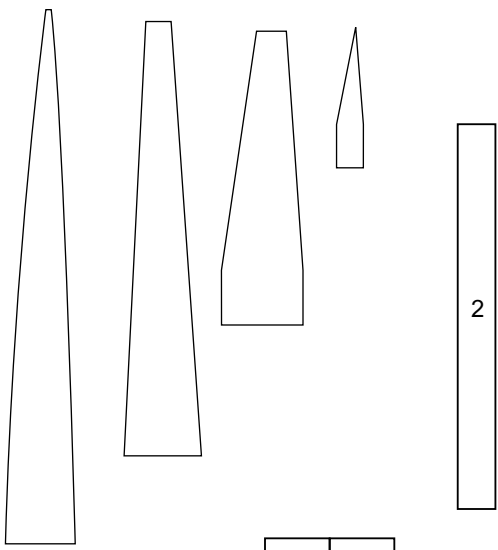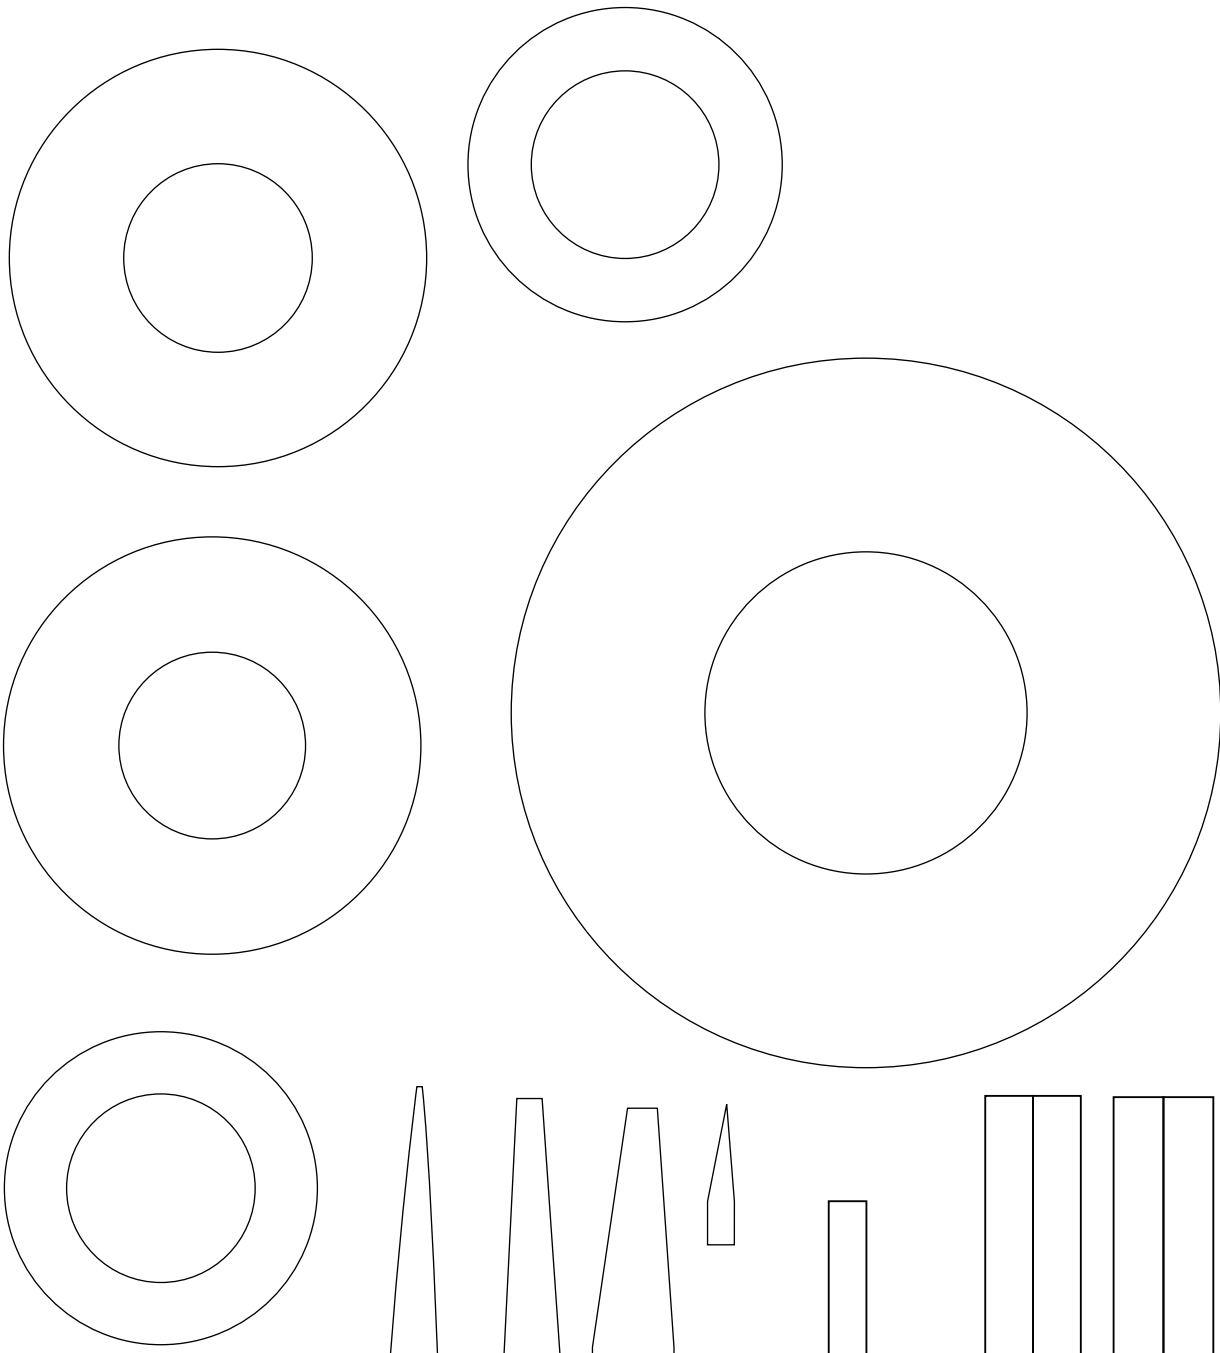

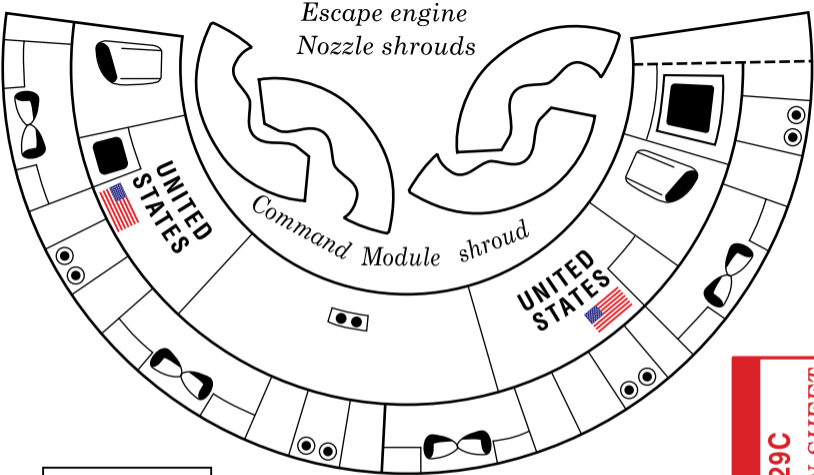

· ·  
 LOWER  
 "V" STRUT  
 ASSEMBLY  
 PIECE  
 · ·

Push the point of a sharp  
 pencil through each of the  
 dots to make a 1/32" hole

· ·  
 UPPER  
 "V" STRUT  
 ASSEMBLY  
 PIECE  
 · ·

68E27A

**SP-29C**

**PATTERN SHEET**