

# PNC-50SP

Canopy to add to 071027  
Skywriter Nose Cone

Adapted by Greg Poehlein

Print this page on 110# cardstock or transfer to thin (.010") sheet styrene. Score along fold lines. Cut out canopy, fold and glue on glue tab (G). Apply glue to bottom of canopy and glue to side of nose cone. If the canopy is made from cardstock, use epoxy. If made from styrene, sand off any paint on the cone and use model cement. Line up front point of canopy and small mark on back with mold seam of cone. Back edge of canopy should be 1" forward of the shoulder. (See figure 1.)

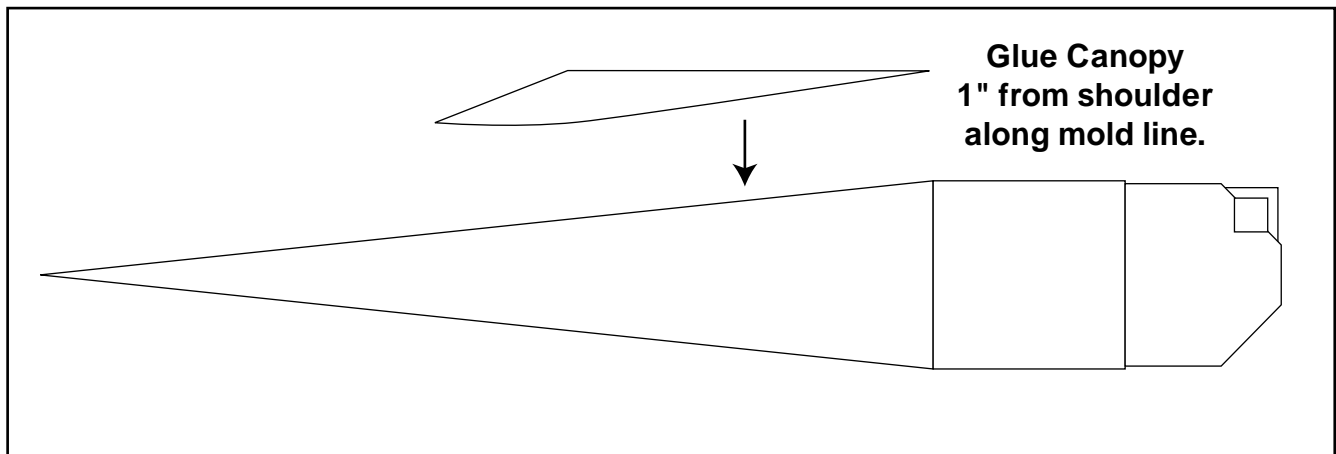
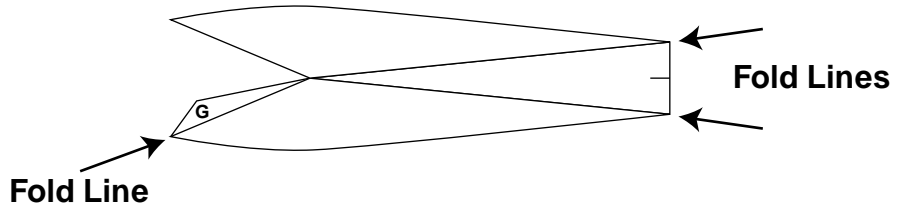


Figure 1